

AQUA ARCCO


Aqua Arcco Floor Mounted Soker Tub Faucet - Chrome / SKU#: AFT015

KUBEBATH
AFFORDABLE LUXURY FOR YOUR BATHROOM




INSTALLATION GUIDE


Tools you will need




Adjustable wrench



Pipe Tape



Hexagon wrench

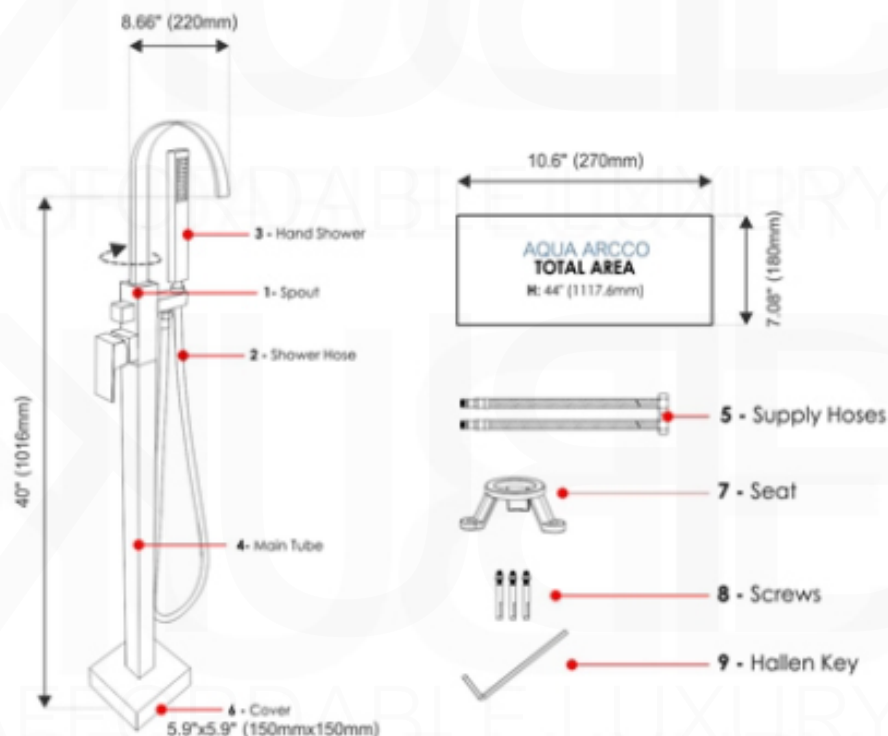

MAINTENANCE

Your new faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will scratch, dull, and/or damage the finish and/or product void your warranty.

SAFETY TIPS


Be sure to shut off water supply prior to installation. Protect your eyes with safety glasses when cutting or soldering water supply lines. Cover your drain to avoid losing parts.

IMPORTANT POINTS

Prior to beginning installation, turn off the cold and hot water lines and open the hot and cold knobs on the old faucet to release build-up pressure. When installing your new faucet, turn the connector nuts finger-tight, then use one wrench to anchor the fitting and a second wrench to tighten the nut one additional turn. Connections that are too tight will reduce the integrity of the system. Wrap all threaded connections with Teflon tape available at your local hardware or plumbing supply store. Always wrap in a clockwise direction. All installations can vary depending on how your previous faucet was installed. Not all necessary supplies to install your faucet are included, however, they are available wherever plumbing supplies are sold.

We recommend installation to be done by qualified licensed plumber.


Prior to installation please read the instructions thoroughly, confirm that all parts are included and visually inspect the unit for any defects. If you have any questions please contact the Store Department before proceeding with installation.

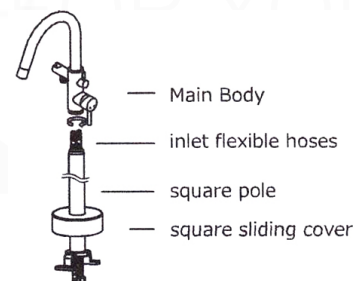

1. Insert the flexible hoses through the square pole and assemble them to main body turning manually.




2. Combine the square pole with the main body and secure them together with the 2 screws on rear with the key.

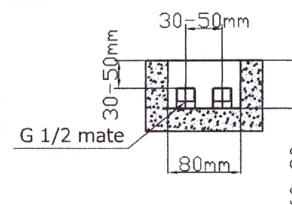

3. Create a chamber in the floor following the above measure with G1/2 male connectors for water net.



4. Insert the sliding cover on square pole, insert the flexible hoses' nuts through the fixing base and connect G 1/2 nuts with the water connectors fixing tight with a key.

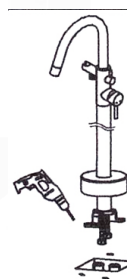

5. Adjust the whole piece to get correct position then drill to fix the base plate.



5. Insert the fixing bolts and fix tight in the floor. Move the cover to hide the base.